


Attaching CLEAR FOCUS® PosterVue® with Tack'em™ Tape 1

*For optional use alone or in combination with other mounting materials,
such as CLEAR FOCUS AdHereVue® transfer adhesive*

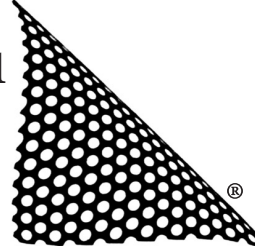

Tack'em Tape 1 is an optically clear cast PVC tape with adhesive on one side.

Use the enclosed roll of clear Tack'em Tape 1, if desired, to install PosterVue on a glass door or window.

Tack'em Tape 1 can be used like an edge sealer to overlap the poster edges and the glass, encapsulating the edges of the poster and securing it in place.

- Tack'em Tape 1 has a clear PET liner covering the adhesive that must be removed prior to use.
- The method below is designed for posters that will not completely cover the glass door or window from edge to edge. For edge-to-edge installations, use clear double-sided tape, such as Tack'em Tape 2, instead of Tack'em Tape 1.
- During attachment and installation, do not stretch Tack'em Tape or the poster.
- PosterVue can be attached to the interior or exterior surface of the glass with the print side facing in or out as desired. Apply Tack'em Tape to the appropriate side of the poster as needed.

Mounting Instructions

The following instructions are for attaching Tack'em Tape 1 to the black (see-through) side of the PosterVue poster (normally used for interior mounting with the poster's print side facing out).

1. Cut strips of Tack'em Tape 1 the same length as the top and bottom of the poster.

Attaching a small poster with Tack'em Tape at the top and bottom may be sufficient. For larger posters, you may wish to use Tack'em Tape on all 4 sides.

2. Peel back the edge of the clear liner on the Tack'em Tape 1 to expose the adhesive.

If necessary, attach a small piece of adhesive tape to both sides of the end of Tack'em Tape to separate the liner from the tape.

3. With the printed side of the poster facing down on a table or other clean, flat surface, attach approx. 1/3 to 1/2 the width of the Tack'em Tape 1 along the top edge of the unprinted side of the poster. The other edge of the tape will be used to attach the poster to the interior surface of the window.

4. With the printed side of the poster facing out, place the poster in the window, align as needed, and tack the top of it in place.

5. Follow the steps above to attach the remaining strip(s) of Tack'em Tape 1 to the bottom and, if necessary, to the sides of the poster. Trim strips as needed to fit.

Finally, press the strips of Tack'em Tape 1 firmly against the glass to secure the poster in place.

Questions?

Call 1-800-307-7990 and ask for customer service.

CLEAR FOCUS Imaging, Inc.

60 Maxwell Court, Santa Rosa, CA 95401

Tel: 707-544-7990 Fax: 707-544-1886

headoffice@clearfocus.com www.clearfocus.com




Step 2: Peel tape apart.




Step 3: Attach approx. half the tape to poster edge, keep other half free.



Step 4: Align poster and tack top edge in place.

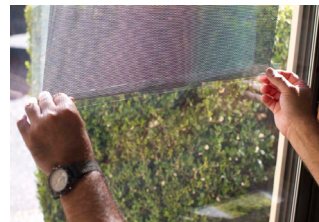

Step 5: Attach tape to bottom edge, remove any slack and tack in place.

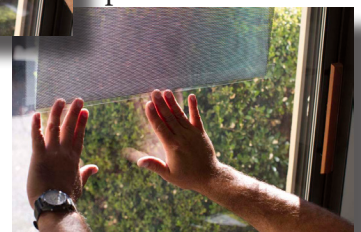

Press tape in place, smoothing as needed.